

# **MODEL** wwwsa-ez3-sm/wwwsa-ez3-fm electronic control valve

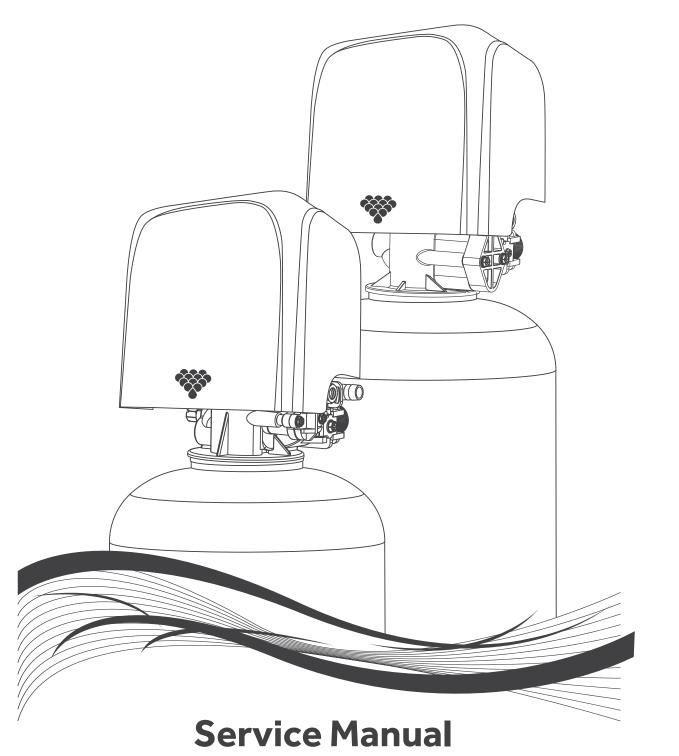



### **Display Introduction & Features**

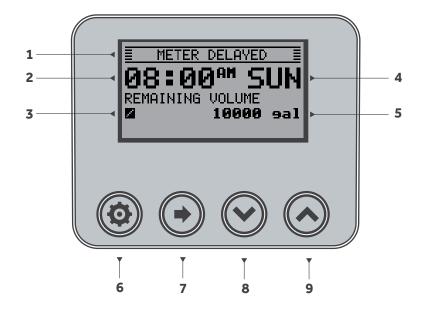

- 1: Regeneration Mode
- 2: Time of day
- 3: Flow Indicator
- 4: Day of Week
- 5: Capacity Remaining/Regeneration Mode/Day override

### **6: SETTING BUTTON**

- (1) Press and hold the Setting button for 5 seconds to enter Programming Mode.
- (2) When the valve is in Programming Mode, Press setting button return last display
- (3) Press and hold setting button for 5 sec under any display, back to service display
- (4) Press and hold, power on until the screen lights up to reset all parameter to the factory settings.

### 7: RIGHT BUTTON

- (1) Press and hold the Right Button for 5 seconds to start immediate regeneration manually.
- (2) Press Right Button during a Regeneration Cycle to immediately advance the valve to the next cycle step position and resume normal step timing. (3) When the valve is in Programming Mode, press Right Button to move the cursor.

### 8: DOWN BUTTON

(1) When the valve is in Programming Mode, press Down Button to adjust setting

### 9: UP BUTTON

(1) When the valve is in Programming Mode, press Up Button to adjust setting.

# **Programming Mode Setting**

Press and hold the Setting Button for 5 seconds.

Tress and noid the Setting	
TIME OF DAY REGENERATION TYPE UNIT OF VOLUME REMAINING VOLUME DAY OVERRIDE REGENERATION TIME	Press "——" to enter the display for current time and week setting
SET TIME OF DAY AND DAY OF WEEK:	Default : 08:00 AM SUN (08:00 SUN-24 hours)
DAY OF WEEK:	Press " $\rightarrow$ " to move
	Press "^" and "↓" to adjust the data
	Press"Setting Button" back to last display
ØB:00 <sup>™</sup> SUN	AM and PM will be changed according to the time setting
TIME OF DAY  REGENERATION TYPE UNIT OF VOLUME REMAINING VOLUME DAY OVERRIDE REGENERATION TIME	Press " $\rightarrow$ " to enter regeneration type setting
SET_REGENERATION	Default : Meter Delayed
TYPE: ▶TIME CLOCK DELAYED 🛱	Press " $\uparrow$ " and " $\downarrow$ " to move the arrow to certain item
DAYS OF WEEK	Press " $\rightarrow$ " to choose the certain item
HOURS DELAYED	Press"Setting Button" back to last display
METER IMMEDIATE	
SET REGENERATION TYPE: METER DELAYED	
TIME OF DAY REGENERATION TYPE UNIT OF VOLUME REMAINING VOLUME DAY OVERRIDE REGENERATION TIME	Press " $\rightarrow$ " to enter Unit of Volume setting
SET UNIT OF VOLUME:	Default : U.SGALLONS
U.SGALLONS	Press " $\uparrow$ " and " $\downarrow$ " to move the arrow to select the type of unit
METRIC -LITERS	Press " $\rightarrow$ " to choose the certain item
METRIC -m3	Press"Setting Button" back to last display
TIME OF DAY REGENERATION TYPE UNIT OF VOLUME REMAINING VOLUME DAY OVERRIDE REGENERATION TIME	Press " $\rightarrow$ " to enter Remaining Volume setting
SET REMAINING VOLUME:	Default :10000 GALLONS, Range: 1~99999 gallons 100000 LITERS, Range: 1~999999 liters
	100.00 M3, Range: 0.01~999.99 M3
GALLONS	Press " $\uparrow$ " and " $\downarrow$ " to adjust the remaining volume data Press " $\rightarrow$ " to move
	Press"Setting Button" back to last display
	5

# Programming Mode Setting (Continued)

TIME OF DAY REGENERATION TYPE UNIT OF VOLUME REMAINING VOLUME DAY OVERRIDE REGENERATION TIME	Press "→" to enter Day	Override setting
SET REGENERATION DAY OVERRIDE:	Default : OFF Range:01~99 Days	
DEFE	Press "↑" and "↓" to adjust the data Press"Setting Button" back to last display	
TIME OF DAY REGENERATION TYPE UNIT OF VOLUME REMAINING VOLUME DAY OVERRIDE REGENERATION TIME	Press "→" to enter Reg	eneration Time setting
SET REGENERATION	Default : 02:00 AM (02:	00 -24 hours)
1 THE -	Press " $\uparrow$ " and " $\downarrow$ " to adj	ust the data
	Press "→" to move	
[ <u>3]2</u> :00 <sup>an</sup>	Press"Setting Button"	
	Am and FM will be chan	ged according to the time setting
CYCLE STEP TIMES DOSING PUMP CHLORINE PRODUCER AUXILIARY RELAY LANGUAGE	Press "→" to enter cho Press "↑" and "↓" to adj Press"Setting Button"	ust the data or move the arrow to certain item
SET REGENERATION CYCLE STEP TIMES:	SET REGENERATION CYCLE STEP TIMES:	BACK WASH
BACK WASH	BACK WASH	Default: 10 mins
010	010	Range: 1~999 mins
010 Min	<u>010</u> Hin	
SET REGENERATION CYCLE STEP TIMES:	SET REGENERATION CYCLE STEP TIMES:	BRINE DRAW
BRINE DRAW 🗢	BRINE DRAW	Default: 60 mins Range: 0~999 mins
060 Min	060 <sub>Min</sub>	Kange. 0 - 999 mins
SET REGENERATION CYCLE STEP TIMES:	SET REGENERATION CYCLE STEP TIMES:	RAPID RINSE
RAPID RINSE	RAPID RINSE	Default: 12 mins
012min	012 <sub>Min</sub>	Range: 0~999 mins
SET REGENERATION CYCLE STEP TIMES:	SET REGENERATION CYCLE STEP TIMES:	WATER REFILL
WATER REFILL	WATER REFILL	Default: 10 mins
		Range: 0~999 mins
010 <sub>Min</sub>	010 <sub>Min</sub>	

# Programming Mode Setting (Continued)


CYCLE STEP TIMES DOSING PUMP CHLORINE PRODUCER AUXILIARY RELAY LANGUAGE	Press " $\rightarrow$ " to enter Dosing Pump setting
SET DOSING PUMP:	Default : OFF
▶OFF	Press " $\rightarrow$ " to enter setting Press"Setting Button" back to last display
SET DOSING PUMP: ▶ON VOLUME: <b>001</b> eal TIME: <b>001</b> Min	<ul> <li>ON</li> <li>Set volume to start the pump,Range: 1~999 gallons Range: 1~9999 liters   Range: 0.01~9.99 M3</li> <li>Set pump running time,Range: 1~999 minutes Press "↑" and "↓" to adjust the data or move the arrow to certain item Press "→" to enter setting Press"Setting Button" back to last display</li> </ul>
CYCLE STEP TIMES DOSING PUMP CHLORINE PRODUCER AUXILIARY RELAY LANGUAGE	Press " $\rightarrow$ " to enter Chlorine Producer setting
SET CHLORINE PRODUCER:	Default : OFF
▶OFF	Press "—>" to enter setting Press"Setting Button" back to last display
SET CHLORINE PRODUCER: ▶ON VOLTAGE: <b>2.5</b> VDC TIME: <b>001</b> Min	<ul> <li>ON</li> <li>Set Chlorine producer voltage, 2.5 VDC/5.0 VDC for option</li> <li>Set Chlorine producer running time, Range: 1 minute~According to the maximum time of Brine Draw</li> <li>Press "↑" and "↓" to adjust the data or move the arrow to certain item Press "→" to enter setting</li> </ul>
	Press"Setting Button" back to last display
CYCLE STEP TIMES DOSING PUMP CHLORINE PRODUCER AUXILIARY RELAY LANGUAGE	Press " $\rightarrow$ " to enter Auxiliary Relay setting
SET AUXILIARY RELAY:	Default : Normally Closed
NORMALLY CLOSED NORMALLY OPEN	■ Normally Open Press "→" to choose the certain item
CYCLE STEP TIMES DOSING PUMP CHLORINE PRODUCER AUXILIARY RELAY	Press "→" to enter Language setting Default : English   ■ Deutsch   ■ French   ■ Italian   ■ Spanish Press "↑" and "↓" to adjust the data or move the arrow to certain item Press "→" to enter setting Press"Setting Button" back to last display
SET LANGUAGE:	SET LANGUAGE:
ENGLISH DEUTSCH FRENCH ITALIAN	SPANISH

# Programming Mode Setting (Continued)

TIME OF DAY REGENERATION TYPE REGENERATION TIMES CYCLE STEP TIMES CHLORINE PRODUCER AUXILIARY RELAY	If the Regeneration Type is set to Hours Delayed Press "—" to enter Regeneration Times setting
SET REGENERATION TIMES: >1ST REGEN 12:00 AM 2ND REGEN 02:00 AM 3RD REGEN 04:00 AM 4TH REGEN 06:00 AM	Default : 12 cycles regeneration every 24 hours, every 2 hours have one complete regeneration cycle Press "→" to enter setting,and then Press "→" to move Press "↑" and "↓" to adjust the data Press"Setting Button" back to last display AM and PM will be changed according to the time setting
SET REGENERATION TIMES: >5TH REGEN 08:00 AM 6TH REGEN 10:00 AM 7TH REGEN 12:00 PM 8TH REGEN 02:00 PM	
SET REGENERATION TIMES: •9TH REGEN 04:00 PM 10TH REGEN 06:00 PM 11TH REGEN 08:00 PM 12TH REGEN 10:00 PM	
SET REGENERATION TIMES: ▶1ST REGEN 04:00 PM 2ND REGEN OFF	Close any regeneration time except first line, others will be closed.
TIME OF DAY REGENERATION TYPE REGEN DAYS OF WEEK REGENERATION TIME CYCLE STEP TIMES CHLORINE PRODUCER	If the Regeneration Type is set to Days of Week Press " $\rightarrow$ " to enter Regeneration Days of week setting
SET REGENERATION DAYS OF WEEK: MONDAY OFF TUESDAY OFF WEDNESDAY OFF THURSDAY OFF	Default : MONDAY OFF TUESDAY OFF WEDNESDAY OFF THURSDAY OFF FRIDAY OFF
SET REGENERATION DAYS OF WEEK: FRIDAY OFF SATURDAY ON SUNDAY ON	FRIDAT       OFF         SATURDAY       ON         SUNDAY       ON         Press "↑" and "↓" to move the arrow to certain item         Press "→" to enter setting         Press "Setting Button" back to last display

Note: after setting up or under any Settings menu, press the Settings button for at least 5 seconds. The system saves parameters and returns the working interface


# Powerhead Assembly, EZ3-SM/EZ3-FM

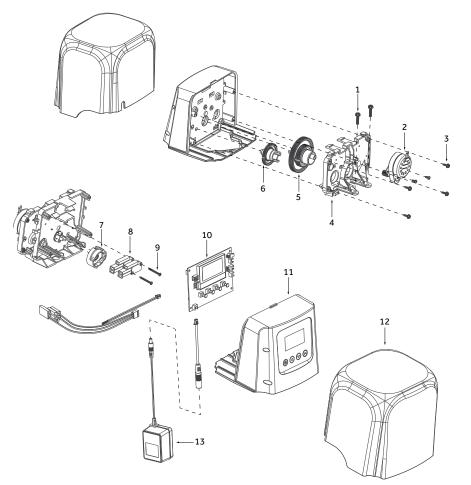

ltem No.	Part No.	Desceription
1	WWUSA-24257002	Screw
2	WWUSA-24257230	Screw,Controller
3	WWUSA-15457032	Bracket
4	WWUSA-18258031	Motor 24V
5	WWUSA-15457035	Back Cover
6	WWUSA-15457037	Gear Main,Down flow,EZ2,Black
	WWUSA-15457064	Gear Main,Down flow,TZ2,Black
	WWUSA-15457067	Gear Main,Up flow,TZ2,White
	WWUSA-15457107	Gear Main,Up flow,Refill first,TZ2,Green
7	WWUSA-15457038	Brine Cam,Down flow,EZ2,Black
	WWUSA-15457065	Brine Cam, Down flow, TZ2, Black
	WWUSA-15457068	Brine Cam, Up flow, TZ2, White
	WWUSA-15457108	Brine Cam,Up flow,Refill first,TZ2,Green
8	WWUSA-15457039	Cam, Switch,Down flow,EZ2,Black
	WWUSA-15457066	Cam, Switch,Down flow,TZ2,Black
	WWUSA-15457069	Cam, Switch, Up flow, TZ2, White
	WWUSA-15457109	Cam, Switch,Up flow,Refill first,TZ2,Green
9	WWUSA-17357001	Microswitch
10	WWUSA-24257268	Screw, Microswitch
11	WWUSA-18258056	Circuit Board
12	WWUSA-23580002	Cover, Front Assembly
†13		Transformer

† For Customized Specification Numbers, See the Back of this Manual

# **Control Valve Assembly EZ3-SM**

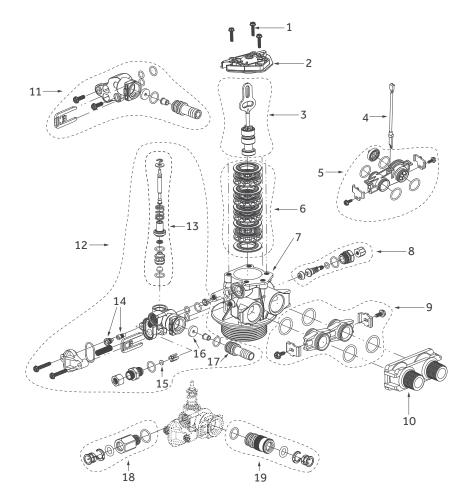


ltem No.	Part No.	Description
1	WWUSA-24257030	Screw
2	WWUSA-23557015	Piston Cap Assembly
3	WWUSA-23580001	Piston Assembly
4	WWUSA-18258058	Harness Assembly, EZ2
5	WWUSA-23557019	Meter Assembly, for SM
6	WWUSA-23560006	Seal & Spacer Kit Assembly
7	WWUSA-23558021	Valve Body, Assembly
<b>‡</b> 7-1	WWUSA-23558025	Mixing Valve Body, Assembly
<b>‡</b> 8	WWUSA-23558026	Mixing ,Assembly
9	WWUSA-23558024	Coupling, Adapter Assembly, for ST
† 10		Yoke
11	WWUSA-23558008	Filter Injector Assembly, for FT
12	WWUSA-23558003	njector and Drain Housing Assembly
13	WWUSA-23557004	Brine Stem Assembly, TZ1
† 14		Nozzle & Throat Assembly
† 15		B.L.F.C Button
† 16		D.L.F.C Button
† 17		Drain Fitting
<b>‡</b> 18	WWUSA-23557010	Brine Quick Fitting Kits
<b>‡</b> 19	WWUSA-23557011	Drain Line Quick Fitting Assembly

‡ Components for Option


† For Customized Specification Numbers, See the Back of this Manual

Control Valve Assembly, Down-flow EZ3-FM

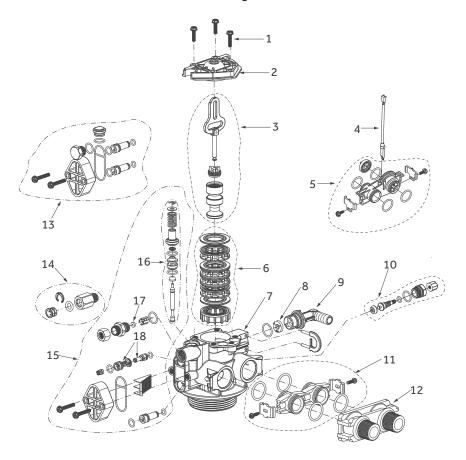

lte	em No.	Part No.	Description
1		WWUSA-24257030	Screw
2		WWUSA-23557015	Valve Cap Assembly
3		WWUSA-23557005	Piston Assembly, Down-flow
4		WWUSA-18258058	Harness Assembly, EZ2
5		WWUSA-23557019	Meter Assembly, for SM
6		WWUSA-23560006	Seal & Spacer Kit Assembly
7		WWUSA-23557002	Valve Body, Assembly Down-flow
<b>‡</b> 7-	1	WWUSA-23557012	Mixing Valve Body, Assembly Down-flow
<b>‡</b> 8			D.L.F.C Button
9			Drain Fitting
† 10		WWUSA-23558026	Mixing ,Assembly
11		WWUSA-23558024	Coupling, Adapter Assembly, for ST
12			Yoke
13		WWUSA-23557008	Filter Injector Assembly, for FT
† 14		WWUSA-23557010	Brine Quick Fitting Kits
† 15		WWUSA-23557003	Injector and Drain Housing Assembly,Down-flow
† 16		WWUSA-23557004	Brine Stem Assembly, TZ1
† 17			B.L.F.C Button
<b>‡</b> 18			Nozzle & Throat Assembly


‡ Components for Option † For Customized Specification Numbers, See the Back of this Manual Control Valve Assembly, Up-flow EZ3-FM

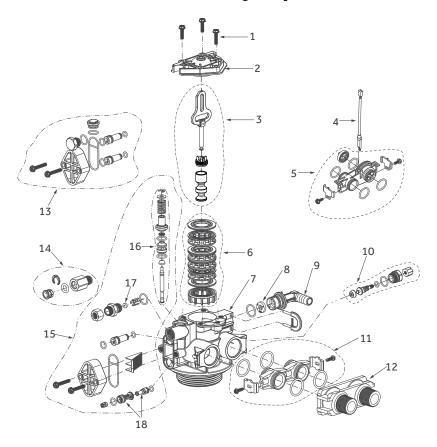

Item No.	Part No.	Description
1	WWUSA-24257030	Screw
2	WWUSA-23557015	Valve Cap Assembly
3	WWUSA-23557016	Piston Assembly, Up-flow
4	WWUSA-18258058	Harness Assembly, EZ2
5	WWUSA-23557019	Meter Assembly, for SM
6	WWUSA-23557006	Seal & Spacer Kit Assembly
7	WWUSA-23557014	Valve Body Assembly, Up-flow
<b>‡</b> 7-1	WWUSA-23557013	Mixing Valve Body Assembly, Up-flow
†8		D.L.F.C Button
†9		Drain Fitting
<b>‡10</b>	WWUSA-23558026	Mixing ,Assembly
11	WWUSA-23558024	Coupling, Adapter Assembly, for ST
†12		Yoke
13	WWUSA-23557008	Filter Injector Assembly, for FT
<b>‡1</b> 4	WWUSA-23557010	Brine Quick Fitting Kits
15	WWUSA-23557007	Injector and Drain Housing Assembly, Up-flow
16	WWUSA-23557004	Brine Stem Assembly,TZ1
†17		B.L.F.C Button
†18		Nozzle & Throat Assembly


‡ Components for Option† For Customized Specification Numbers, See the Back of this Manual

# By-Pass Valve Assembly, Metal

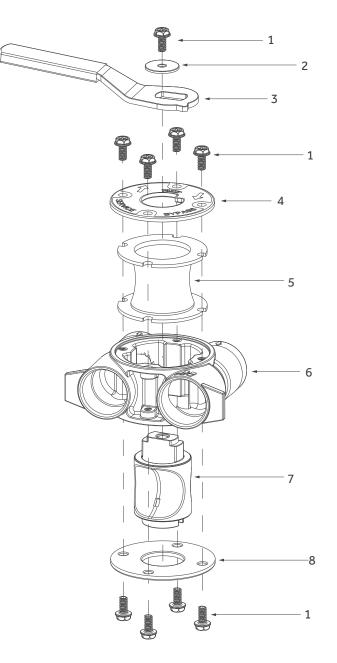

Item No.	Part No.	Description
1	WWUSA-24257012	Screw
2	WWUSA-24257256	Gasket
3	WWUSA-23558010	Lever, Bypass, Assembly
4	WWUSA-23558022	Plate, Bypass, Top Assembly, White, BSP
	WWUSA-23558023	Plate, Bypass, Top,Assembly,Blue,NPT
5	WWUSA-21257242	Seal, Bypass
6	WWUSA-24257254	Bypass Valve Body,3/4"NPT
	WWUSA-24257255	Bypass Valve Body,1"NPT
	WWUSA-24257271	Bypass Valve Body,3/4"BSP
	WWUSA-24257272	Bypass Valve Body,1"BSP
7	WWUSA-23558009	Plug, Bypass Assembly
8	WWUSA-16257220	Plate, Bypass, Bottom


### **By-PassValveAssembly, Plastic**

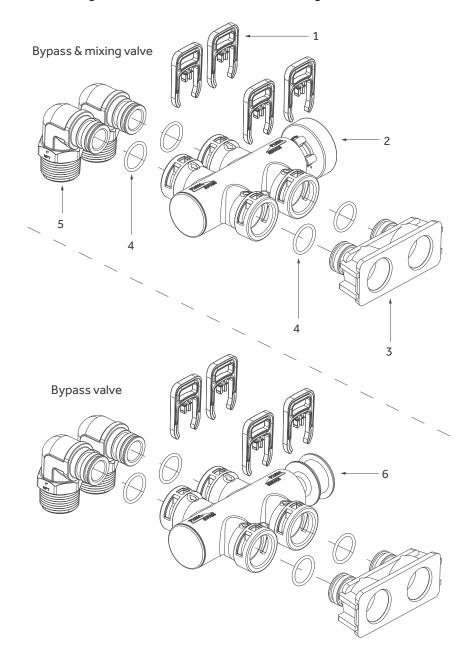

ltem No.	Part No.
1	WWUSA-15257088
2	WWUSA-23558006
3	WWUSA-15257083
4.	WWUSA-21257018
5	WWUSA-15257120
	WWUSA-15257121
	WWUSA-15457102
	WWUSA-15457101
	WWUSA-15257084
	WWUSA-15257085
6	WWUSA-23558007


Retainer Bypass & mixing Valve Body Assembly,Plastic Coupling, Adapter O-ring Yoke,1"NPT,90° Yoke,3/4"NPT,90° Yoke,3/4"BSP,90° Yoke,3/4"BSP,90° Yoke,3/4"BSP Yoke,3/4"BSP Bypass Valve Body Assembly,Plastic

### **Wiring Diagram**

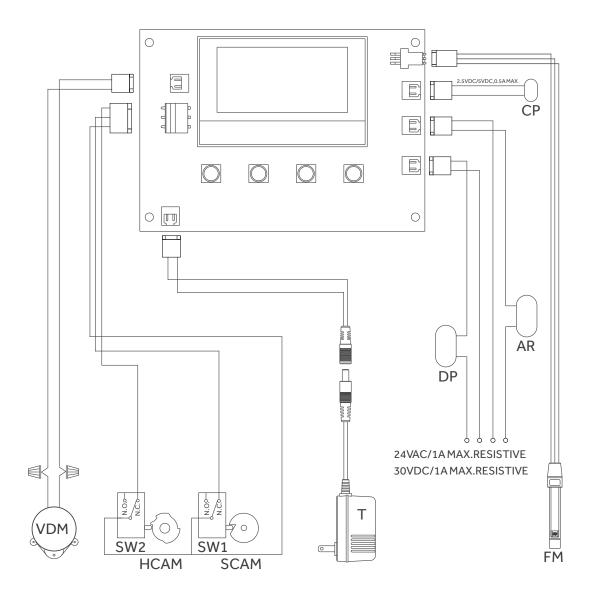

T-24V TRANSFORMER VDM-VALVE DRIVE MOTO NC-RJ11 CONNECTOR FM-FLOW METER(OPTIONAL) SW1-VALVE HOMING SWITCH SW2-VALVE STEP SWITCH HCAM-VALVE STEP CAM SCAM-VALVE STEP CAM CP-CHLORINE PRODUCER DP-DOSING PUMP AR-AUXILIARY RELAY

### **Dimensional Drawing**

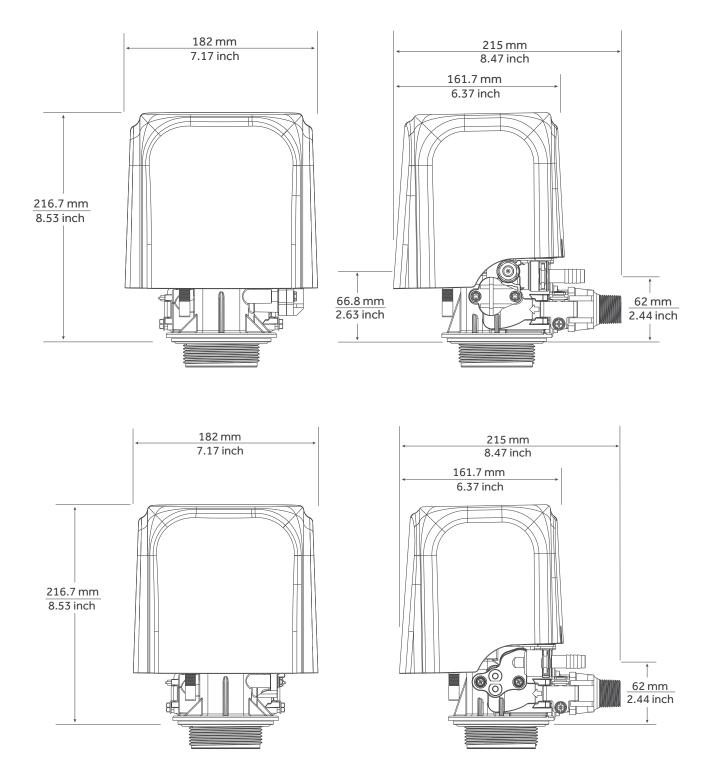

### Troubleshooting

### [DETECTED ERROR 0]



Probable Cause: Motor is stalled.

Solution:

**Recover and Resetting** 

Unplug the unit from the power source,

When power is restored to the unit, the [DETECTED ERROR 0] display code clears. If the condition causing the error has not been resolved the [DETECTED ERROR 0] code reappears in the four digit display. Do not attempt to troubleshoot this problem any further. Contact the dealer to return for repair or replacement.

### [DETECTED ERROR 1]



Probable Cause: Motor is running continuously.

Solution:

Recover and Resetting:

Unplug the unit from the power source, When power is restored to the unit, the [DETECTED ERROR 1] display code clears. If the condition causing the error has not been resolved the [DETECTED ERROR 1] code reappears in the four digit display. Do not attempt to troubleshoot this problem any further. Contact the dealer to return for repair or replacement.

### **Customsized Specification**

#### TRANSFORMER

WWUSA-17357005	Transformer ,24V,CN
WWUSA-17357018	Transformer ,24V,US
WWUSA-17357019	Transformer ,24V,EU
WWUSA-17357025	Transformer ,24V,EN

### YOKE

WWUSA-15257038	Yoke,1"NPT
WWUSA-15257023	Yoke,3/4"NPT
WWUSA-15257089	Yoke,1"BSP
WWUSA-15257090	Yoke,3/4"BSP

#### NOZZLE & THROAT ASSEMBLY, EZ3-SM

WWUSA-23558011	000#,Brown
WWUSA-23558027	00#,Violet
WWUSA-23558028	0#,Red
WWUSA-23558029	1#,White
WWUSA-23558030	2#,Blue
WWUSA-23558031	3#,Yellow
WWUSA-23558032	4#,Green

### NOZZLE & THROAT ASSEMBLY, EZ3-FM

WWUSA-23557018	1#,White
WWUSA-23557018-1	2#,Blue
WWUSA-23557018-2	3#,Yellow
WWUSA-23557018-3	4#,Green

#### **DRAIN LINE FLOW CONTROL (BLFC)**

WWUSA-21247006	BLFC,0.125 GPM
WWUSA-21247021	BLFC,0.25 GPM
WWUSA-21247005	BLFC,0.5 GPM
WWUSA-21247022	BLFC,1.0 GPM

#### DRAIN LINE FLOW CONTROL WASHERS(DLFC)

WWUSA-21257239DLFC,0.8 GPM
WWUSA-21247013DLFC,1.5 GPM
WWUSA-21247012DLFC,2.0 GPM
WWUSA-21247011DLFC,2.4 GPM
WWUSA-21247010DLFC,3.0 GPM
WWUSA-21247009DLFC,3.5 GPM
WWUSA-21247008DLFC,4.0 GPM
WWUSA-21247014DLFC,5.0 GPM
WWUSA-21247007DLFC,7.0 GPM
WWUSA-21257229DLFC,9.0 GPM
WWUSA-21257228DLFC,10 GPM
WWUSA-21257227DLFC,12 GPM
WWUSA-21257226DLFC,15 GPM

#### DRAIN FITTING, EZ3-SM

WWUSA-15257065	.Straight Drain Hose Barb
WWUSA-15257128	.Straight Drain Hose Barb,1/2"NPT
WWUSA-15257026	.Drain Hose 90° Elbow Barb

#### **DRAIN FITTING, EZ3-FM**

WWUSA-15257239	Drain Hose 90°	Elbow Barb,1/2
WWUSA-15257240	Drain Hose 90°	Elbow Barb,3/4